
#### THE SENSUS ELECTRONIC REGISTER

The Sensus Electronic registers provide greater reliability, higher-resolution readings and other features that make them an advancement over any electronic communications registers previously available. In addition, they are completely compatible for use in your present Sensus AMR/AMI System.

# **BARCODE ON REGISTER BONNET**



#### **REGISTER DISPLAY**

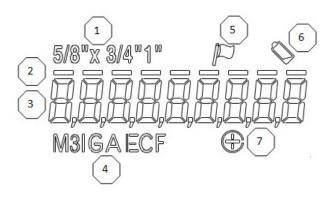


- 1. Meter Size (5/8", 5/8" x 3/4", 3/4", or 1").
- 2. AMR digit bar (4 to 8 digits).
- 3. Totalizer digits.
- 4. Unit of measure (cubic meter, gallon, imperial gallon, cubic feet).
- 5. Flag/Alarm Icon (not currently used)
- Battery Icon (Set when low battery is detected or after 20 years. After 20.5 years of operation the battery symbol remains lit. The least significant AMR digit is replaced with a "?")
- 7. Forward and reverse flow indicator.

### **REGISTER OPERATION**

- 1. To activate the register display, open the lid. The display will remain on for 30 seconds.
- 2. To view the rate of flow mode, close and open the lid within the 30 second time period. Rate of flow mode is identified with the AMR bars flashing. Rate of flow is measured in gallons per minute (gpm).
- 3. To return to Totalizer/AMR mode, close and open the lid within the 30 second time period.



## **READING THE ELECTRONIC REGISTER**

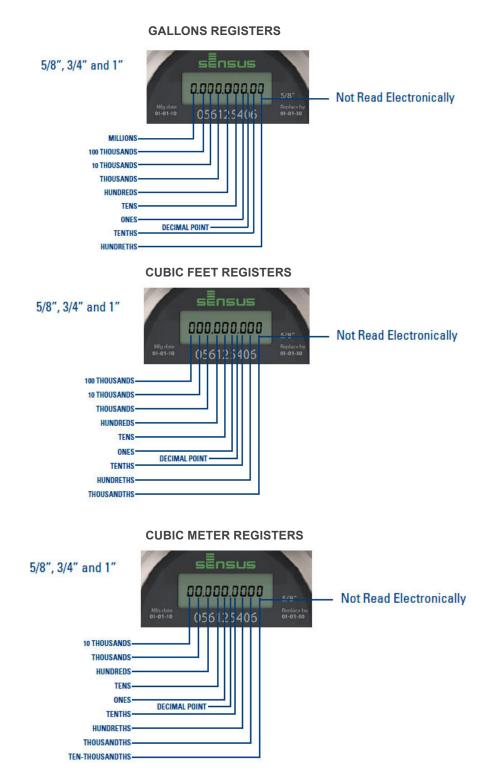

© All products purchased and services performed are subject to Sensus' terms of sale, available at either; http://na.sensus.com/TC/TermsConditions.pdf or 1-800-METER-IT. Sensus reserves the right to modify these terms and conditions in its own discretion without notice to the customer.

This document is for informational purposes only, and SENSUS MAKES NO EXPRESS WARRANTIES IN THIS DOCUMENT. FURTHERMORE, THERE ARE NO IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES AS TO FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. ANY USE OF THE PRODUCTS THAT IS NOT SPECIFICALLY PERMITTED HEREIN IS PROHIBITED.

